




GECKO BRICKS


Wall Mount Instructions Chevrolet Corvette Stingray – (42205)

Kit Contents:


- A. 1x Left Arm
- B. 1x Right Arm
- C. 1x Back Stretcher
- D. 1x Front Stretcher
- E. 1x Flush Mount Horizontal
- F. Flush Mount vertical
- G. 1x Wall Screw
- H. 1x Wall Plug

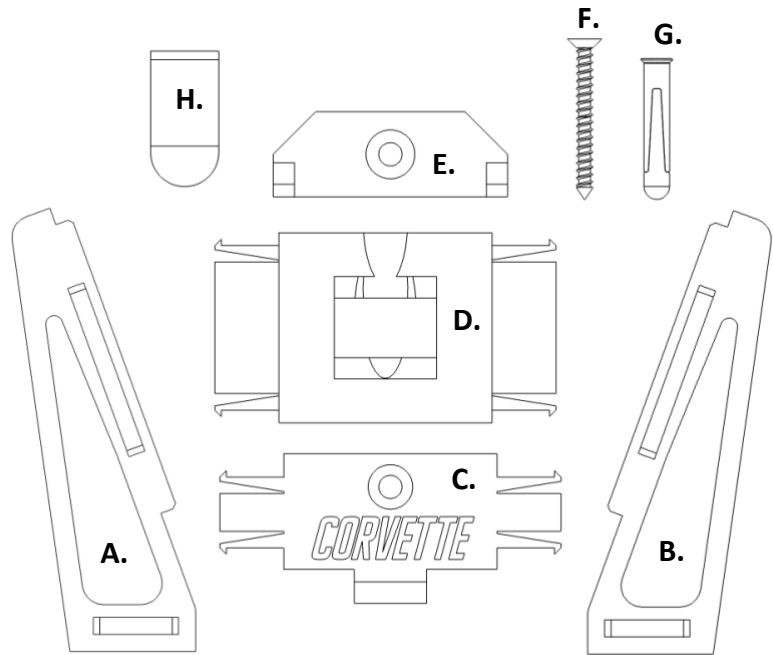

Angled Mount

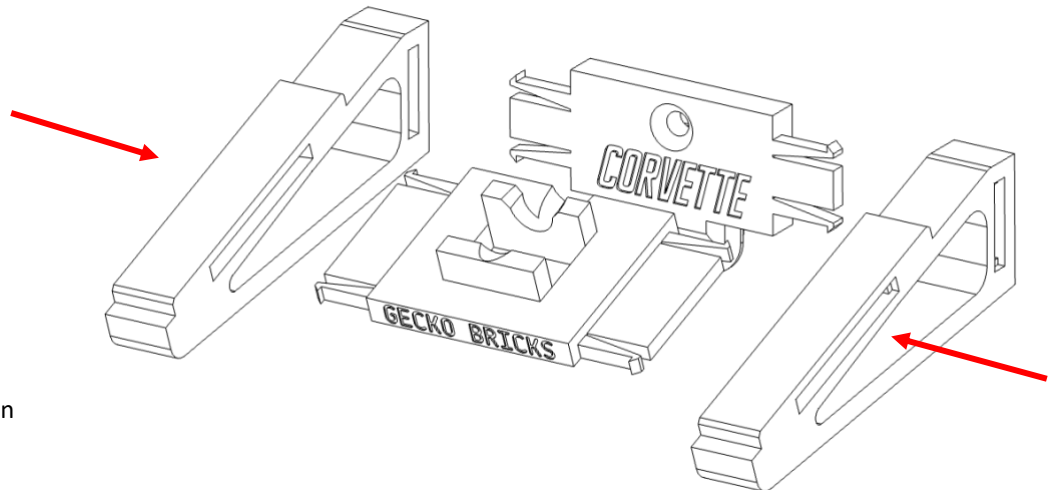

Please ensure the correct orientation of the stretchers and arms.

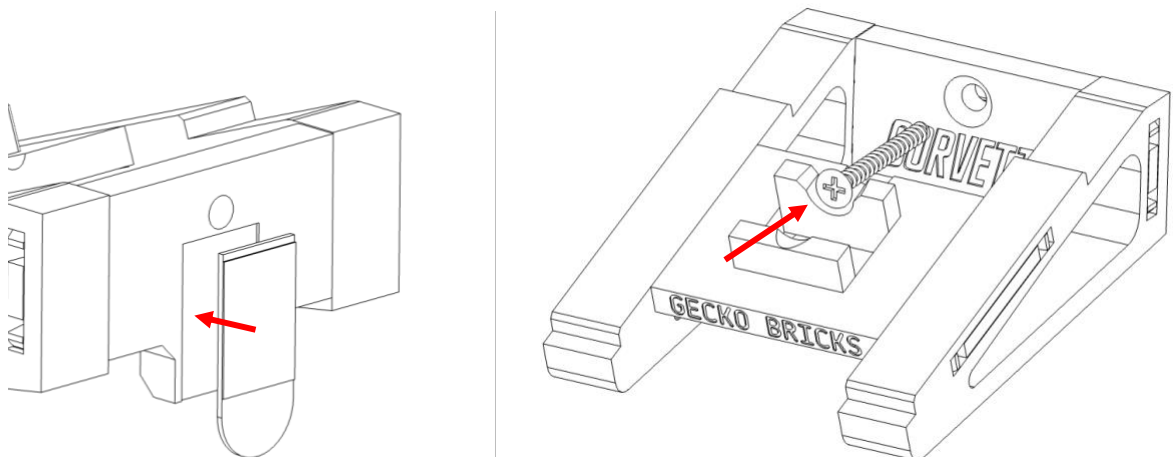


Install both screws into the back stretcher. Do not over tighten (use a screwdriver).




GECKO BRICKS

Wall Mount Instructions Chevrolet Corvette Stingray – (42205)

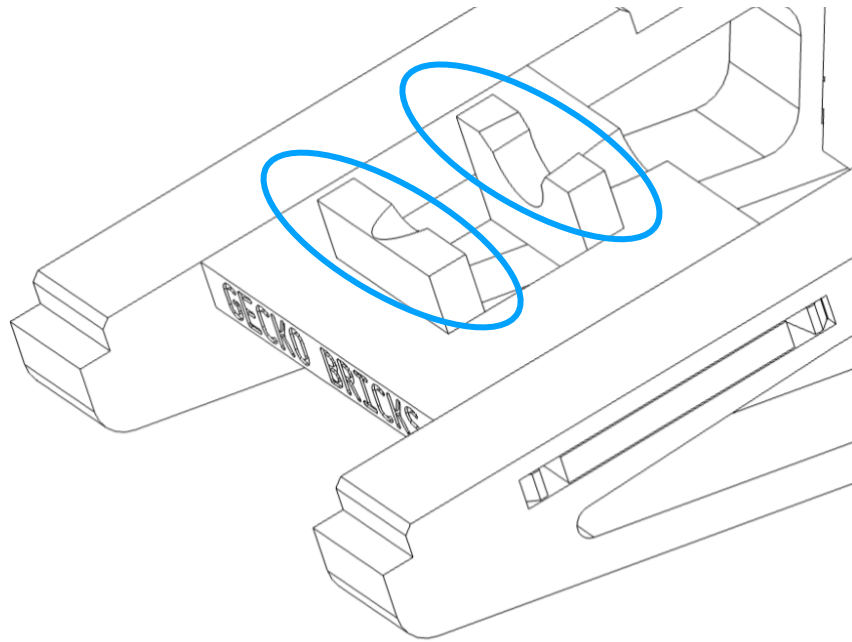

These tabs insert into the frame of the Lego set, Line up the tabs with the corresponding locations on the Lego set.

You can place the set facing either left or right.

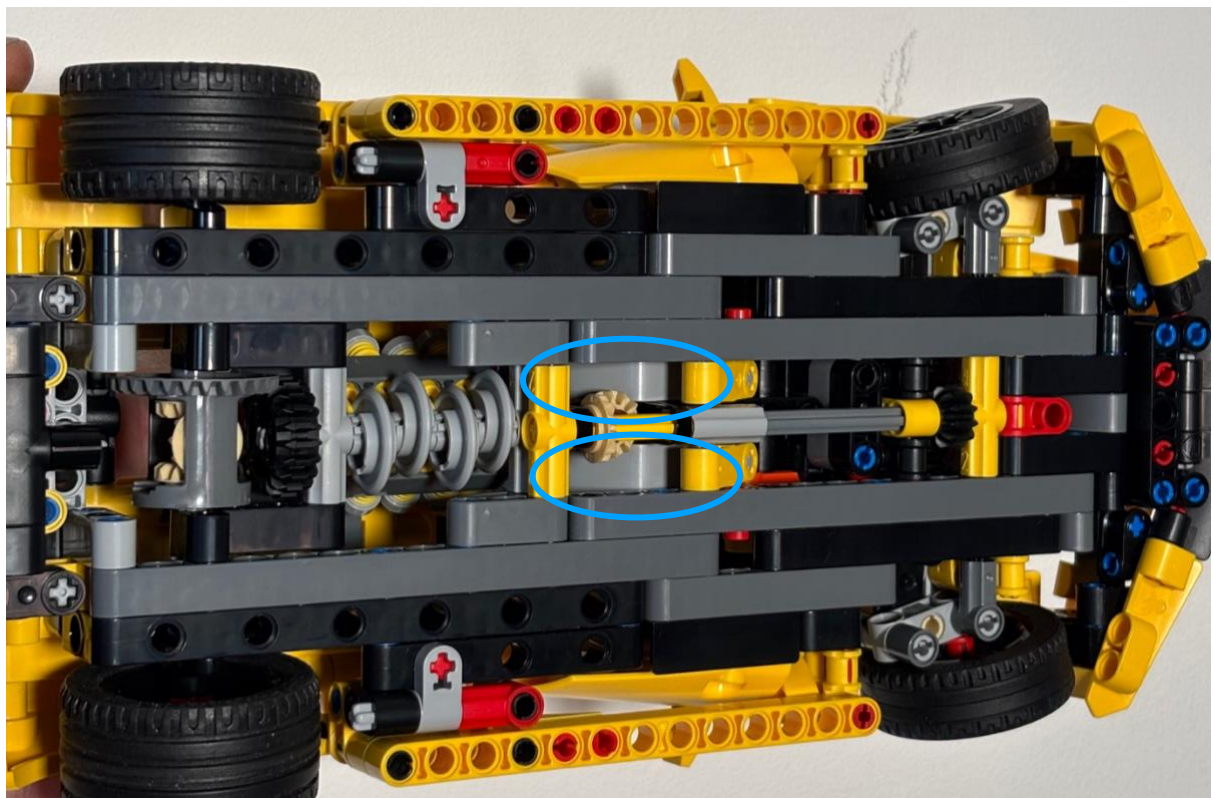




Wall Mount Instructions Chevrolet Corvette Stingray – (42205)

Flush Mount

Hang Vertical (facing up)

Use the fins on the flush mount to hook up and under the frame as shown.

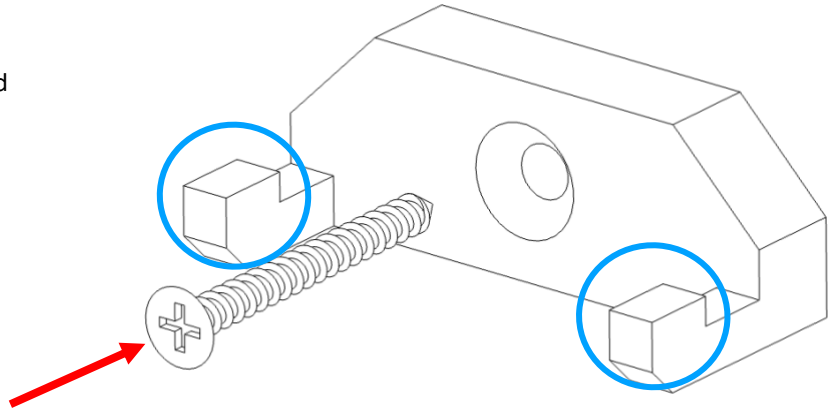

Do not over tighten (use a screwdriver).

