






75389 Instructions (Dark Falcon)

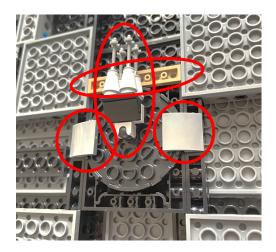

Remove the parts shown

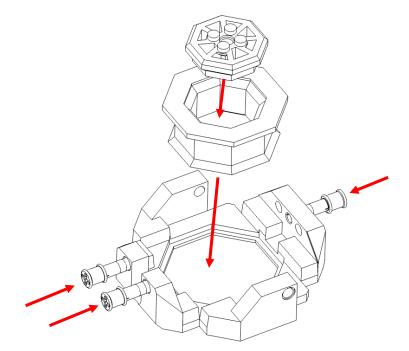


Assemble as shown. Add the three included technic push pins as shown

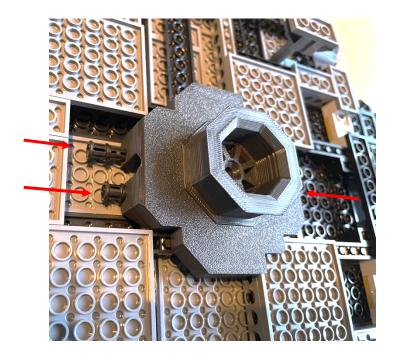


Place the adaptor this way around and then push the pins into the frame.




75257 Instructions

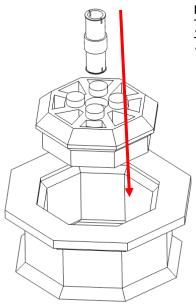


Insert the first adaptor piece into the centre of the underside of the ship. Note you will need to remove the turret and ball joint element for the 75257 falcon variant. *Technic pin from the spare 75257 pieces.

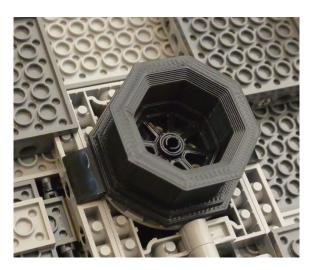


Next you will need to remove the Escape pod as shown.

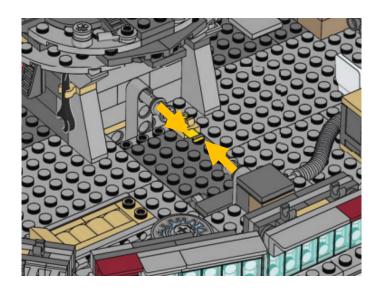

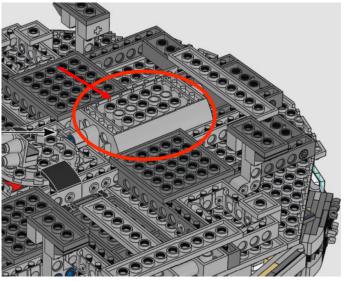




Remove the part shown in red.

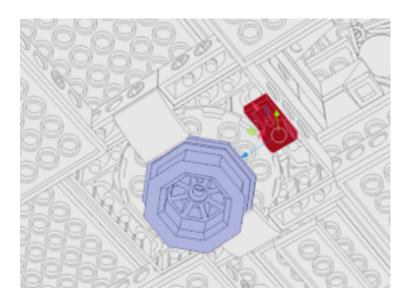


Place the second adaptor over the first and lock in place using the included Technic pins.

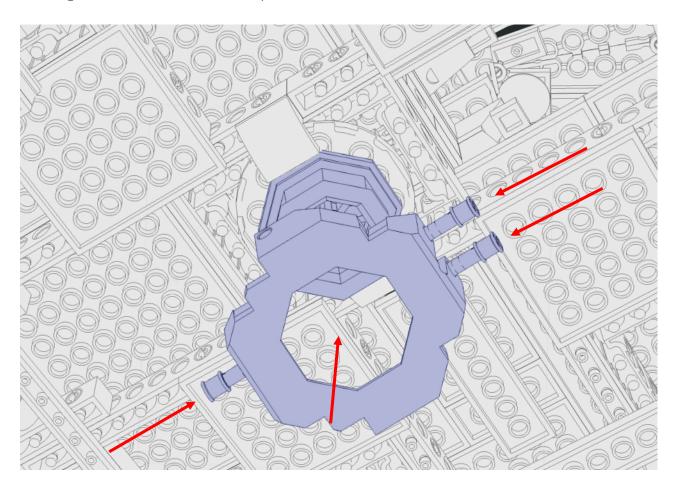





75105 instructions


Remove these pieces from the bottom of your set

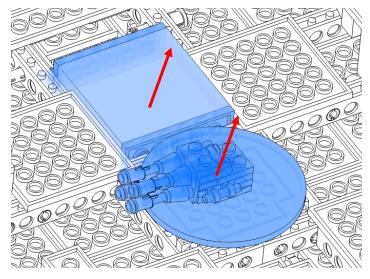


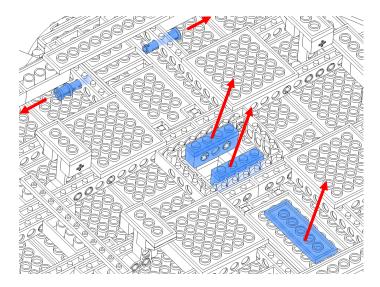

Then re-attach the 2x6 plate as shown

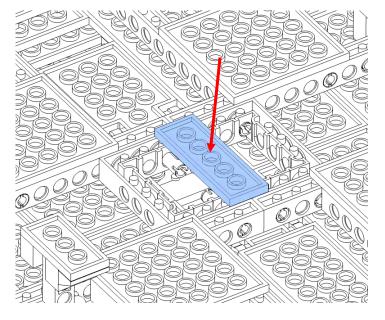

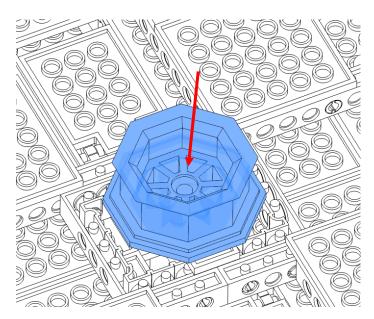

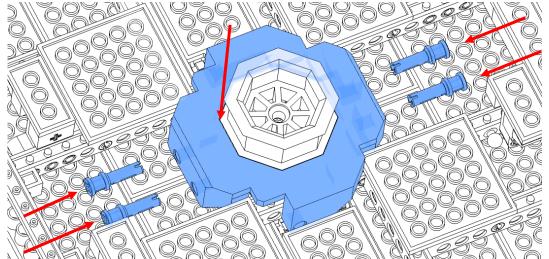


Use the two pins removed previously plus two pins from the bag in the wall mount kit





set.

Wall Mount Instructions Millennium Falcon – (75389, 75257 & 75105)

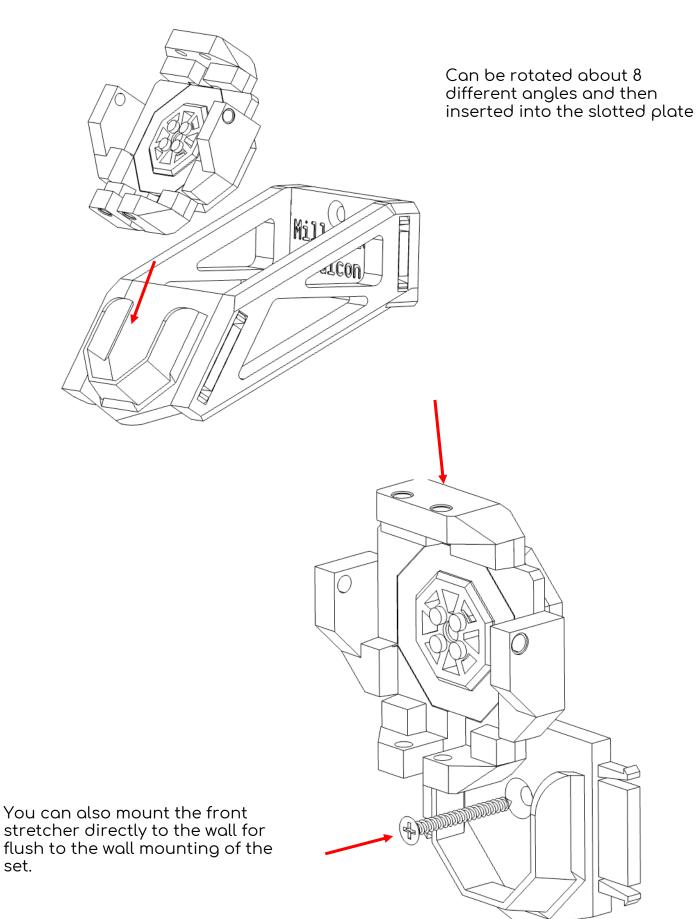



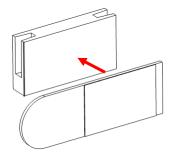



Apply command strip to the cleat. Then secure this to the wall this way up. Finally slid the minifigure mount onto the cleat.

