
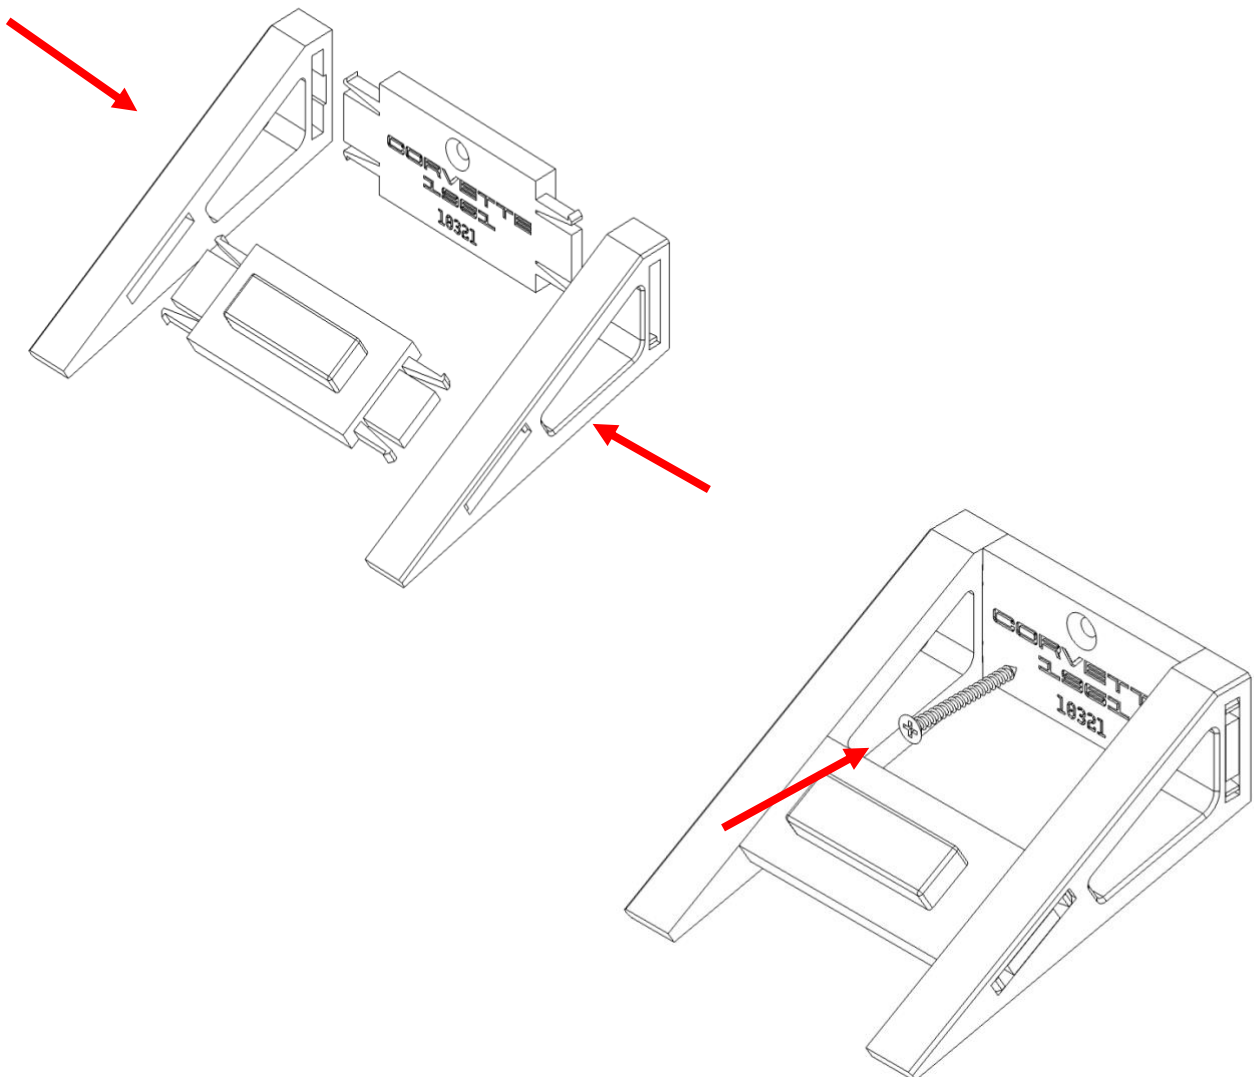




## Wall Mount instructions For 1961 Chevrolet Corvette– (10321)

### Kit Contents:

- A. 1x Left Arm
- B. 1x Right Arm
- C. 1x Back Stretcher
- D. 1x Front Stretcher
- E. 1x Flush mount
- F. 1x Wall screws
- G. 1x Wall plugs
- H. 1x 3M Command strip

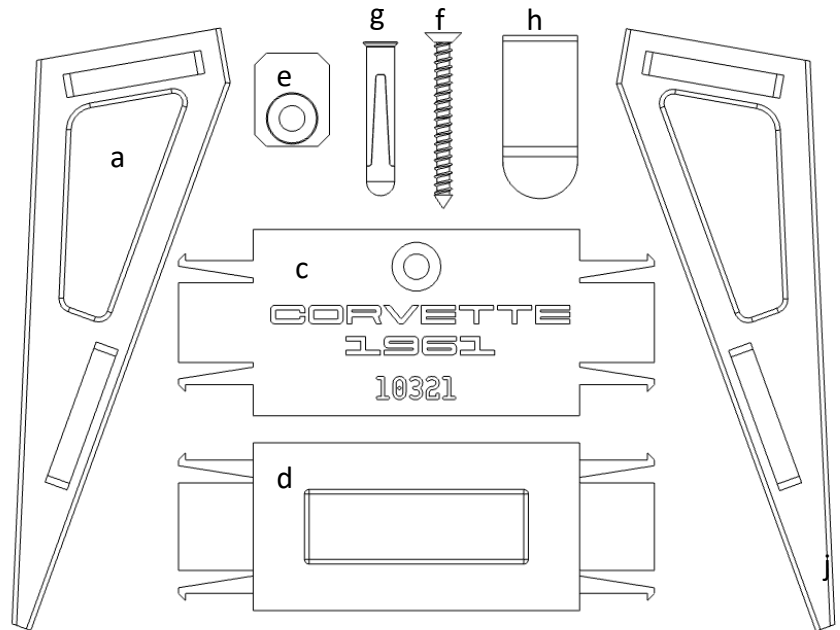

# Wall Mount instructions For 1961 Chevrolet Corvette– (10321)

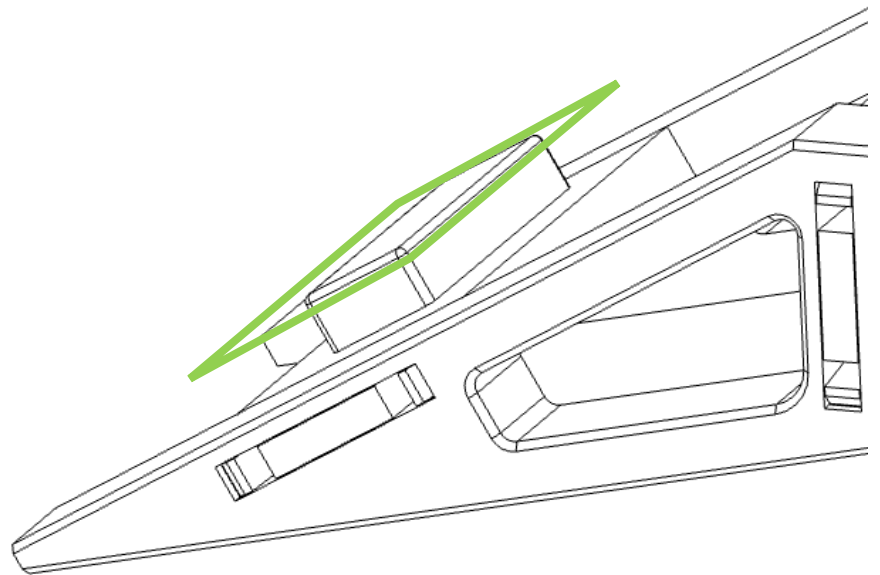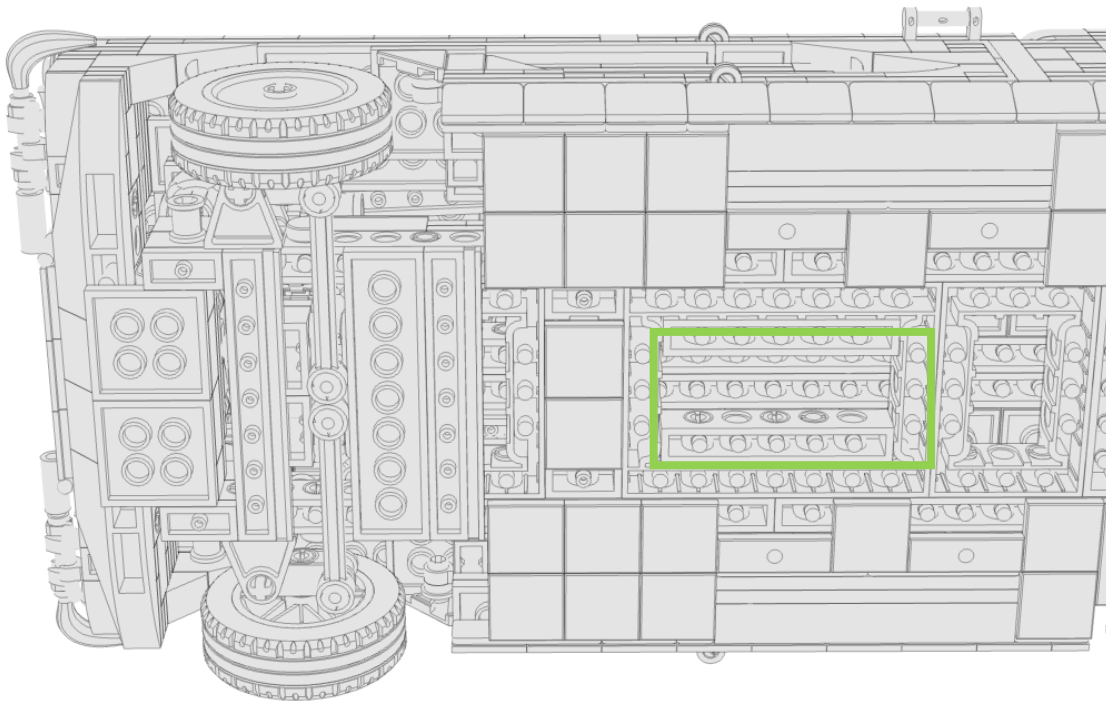

# Wall Mount instructions For 1961 Chevrolet Corvette– (10321)

Flush Mount

