

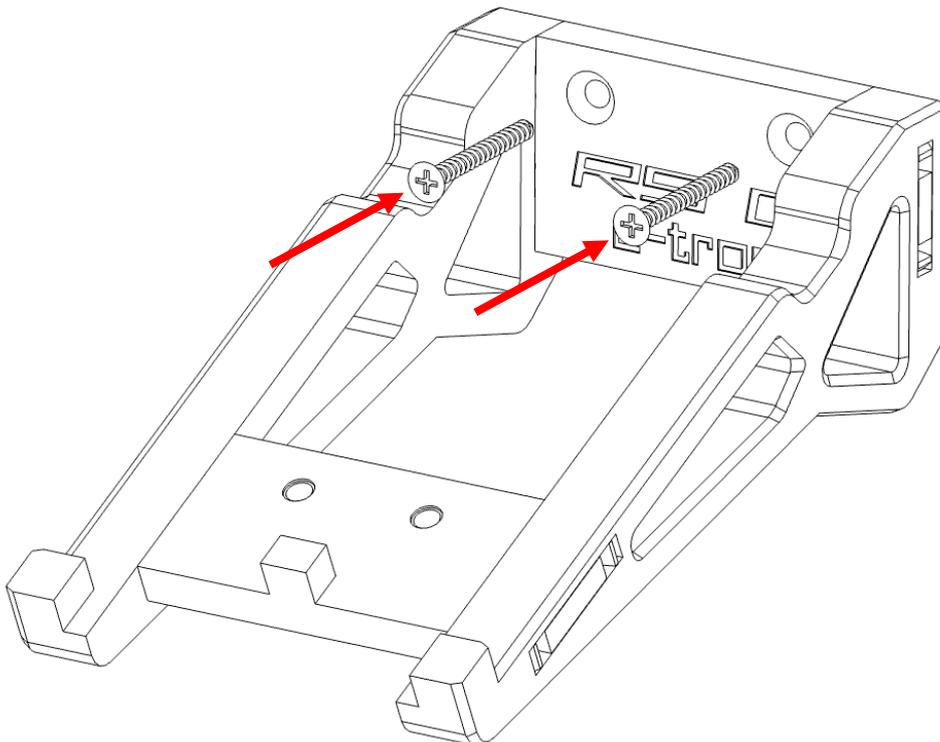
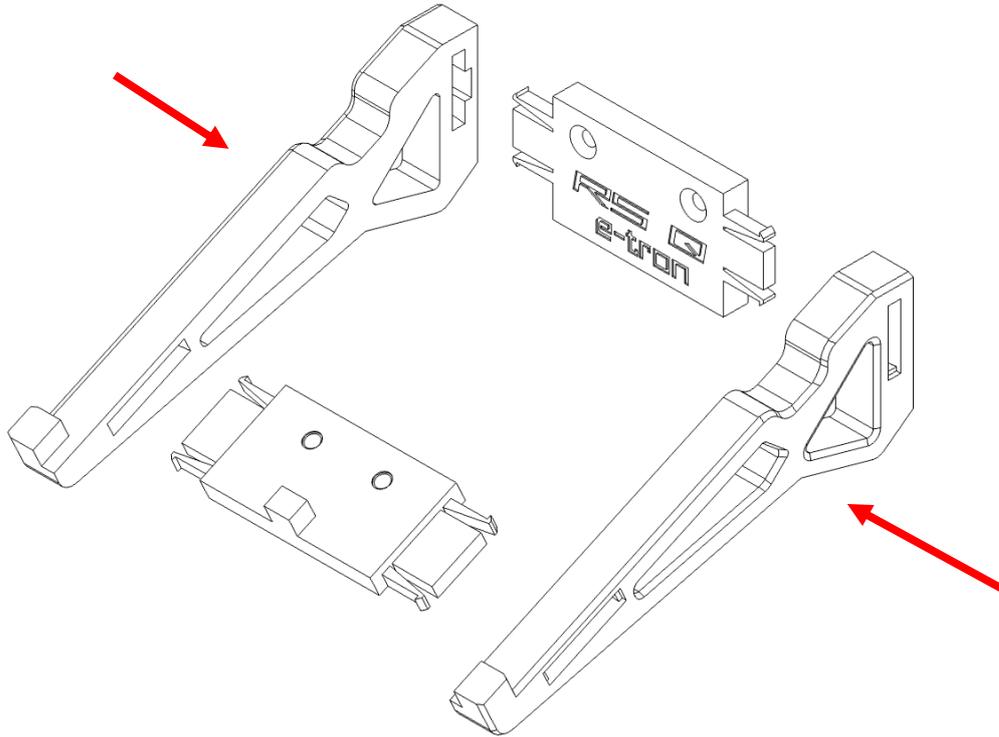
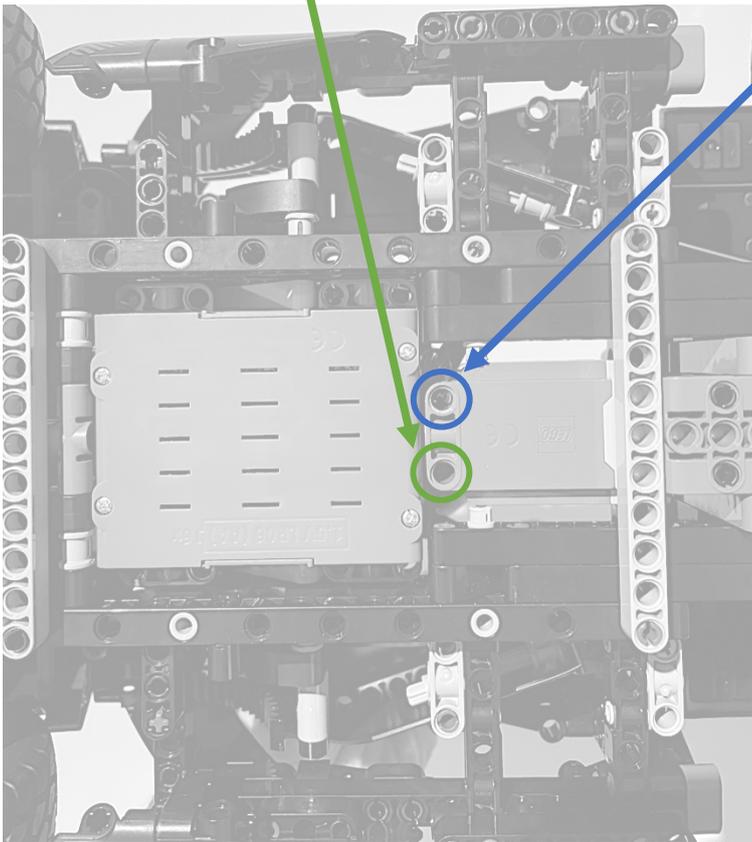


Wall mount Instructions For Audi E-tron – (42160)

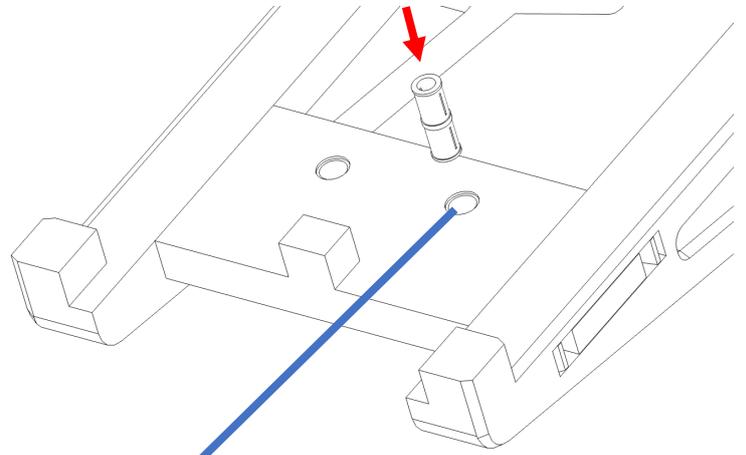

Insert the spare technic pin from the set in the hole on the lower stretcher. Left position is for left facing car, right position for right facing car.

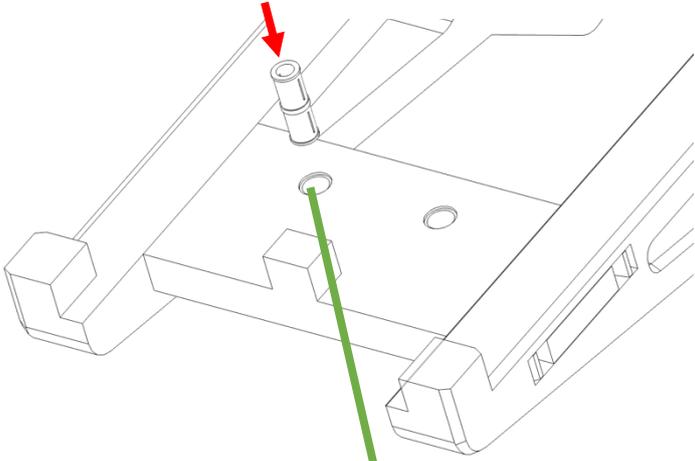

Flush Mount Option

